



Introduction

Accessories



power adapter



 
power cord



USB cable



Manual



driver CD



Screwdriver

Minimum System Requirements

- Intel® Pentium® III 450 MHz or compatible processor
- Microsoft® Windows® XP, Windows 2000, Windows Me (Millennium) or Windows 98 SE (Second Edition) 128 MB RAM
- Available USB port (version 1.1 or later)

Installation

IDE HDD Installation



1. Press right-and-left button and pull the upper cover



2. Secure hard driver on PCB board in case



3. secure HDD with 4 screws



3. Push to close the upper cover

Installing Product Drivers

In Windows XP, Windows 2000 and Windows Me

Upon connecting your Yion Portable Hard Disk to a computer for the first time, Windows automatically installs the required drivers. Your Yion Portable Hard Disk is detected as a Mass Storage Device and no additional drivers are required.

In Windows 98 SE

1. Upon connecting your Yion Portable Hard Disk to a computer for the first time, the **Add New Hardware** dialog box Appears.
2. Click the **Next** button.
3. Select the **Search for the best driver for your device** option, and then click the **Next** button.
4. Select the **CD-ROM drive** check box.
5. Insert the Driver Installation CD into your CD/DVD-ROM Drive, and then click the **Next** button. Windows searches for the necessary files and lists them in the next dialog box.
6. Click the **Next** button. Windows copies the necessary files to your computer.
7. Click the **Finish** button to complete the installation.

Disconnecting Your Yion Portable Hard Disk



To prevent data loss, ensure that:

- You have disconnected your Yion Portable Hard Disk properly in Windows before unplugging it from the USB port on your computer (refer to the steps for your respective operating system)
- you do not unplug your Yion Portable Hard Disk from the USB port on your computer when transferring files to or from the device, or when files or applications stored on your Yion Portable Hard Disk are in use

In Windows XP, Windows 2000 and Windows Me

1. Click the **Safely Remove Hardware** icon on the Taskbar and Click **Safely remove USB Mass Storage Device**.




2. Unplug your Yion Portable Hard Disk when you are prompted To do so.



This prompt appears on the Taskbar in Windows XP. On other operating systems, a message box appears on the desktop instead.

In Windows 98 SE

1. Wait at least 10 seconds after all file transfers are completed.
2. In Windows Explorer, right-click the **Removable Disk** icon And click **Eject**.
3. Unplug your player after 10 seconds.

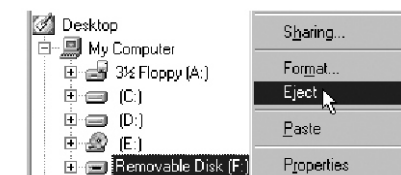

Navigator

WARNING:

Handling the cord(s) on this product may expose you to lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.